


This diagram is not to scale.

Throw this piece away

Throw this piece away

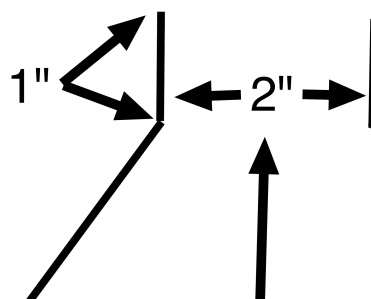


2" is the height of the Canon 580 ex ii flash head. Measure yours to customize the fit.

This will be the part that you keep

This pattern can be used to cut two of the white and two of the black pieces.

WHEN APPLYING RUBBER CEMENT LEAVE THE TOP INCH OR SO UNGULED FOR ATTACHING THE DIFFUSION MATERIAL

18"

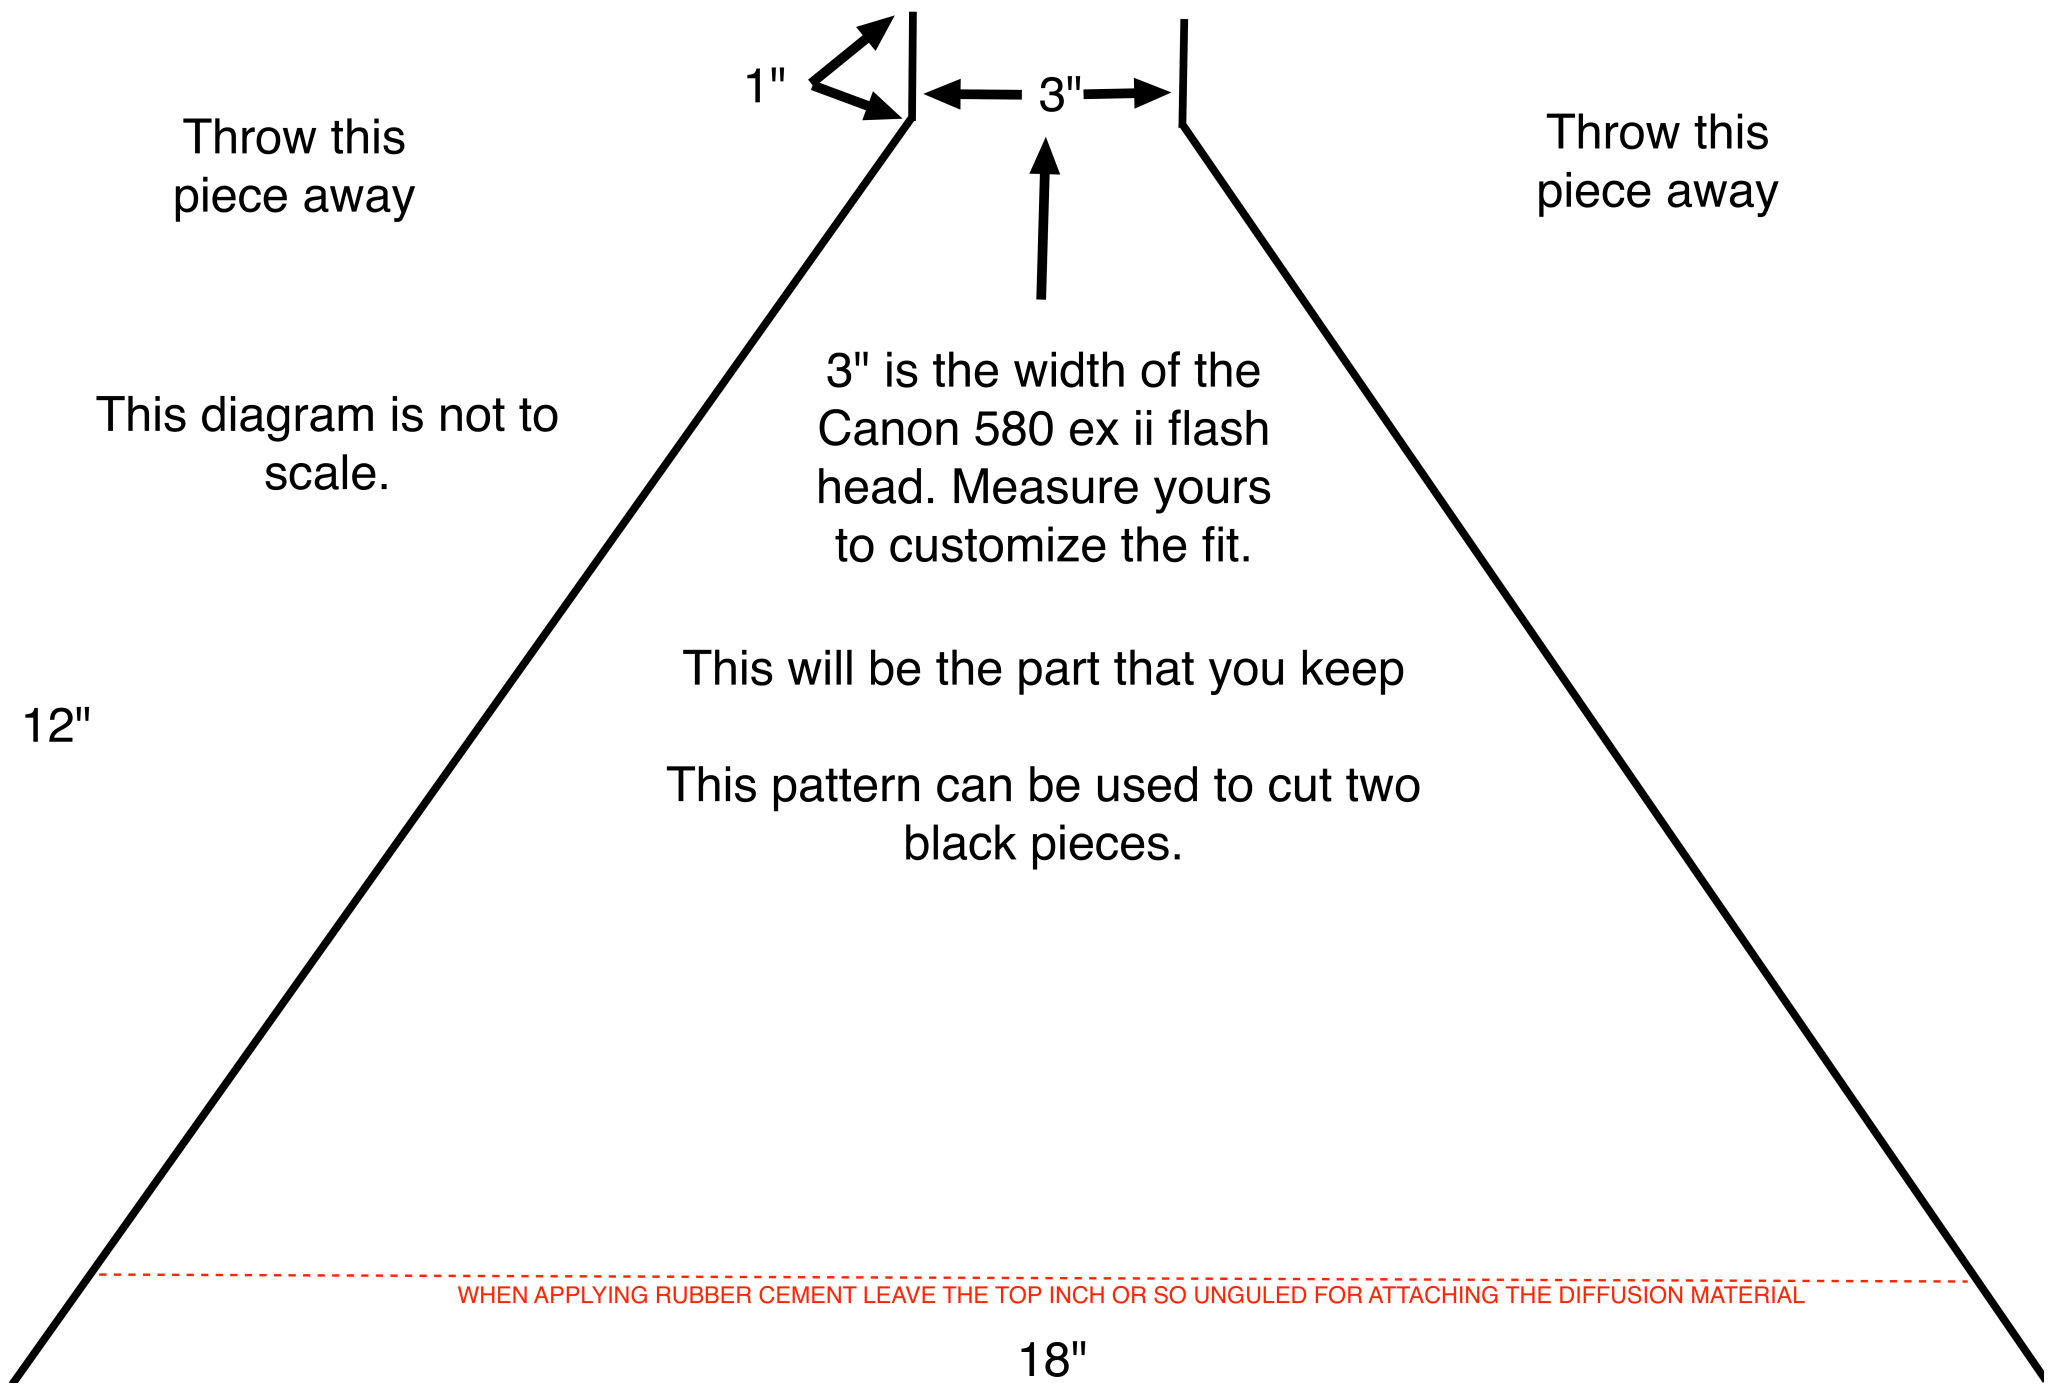

Throw this
piece away

Throw this
piece away

This diagram is not to
scale.

3" is the width of the
Canon 580 ex ii flash
head. Measure yours
to customize the fit.

This will be the part that you keep

This pattern can be used to cut two
black pieces.

WHEN APPLYING RUBBER CEMENT LEAVE THE TOP INCH OR SO UNGULED FOR ATTACHING THE DIFFUSION MATERIAL

18"

Throw this
piece
away

Throw this piece
away

This diagram is not
to scale.

3" is the width of the
Canon 580 ex ii flash
head. Measure yours
to customize the fit.

This will be the part that you keep

This pattern can be used to cut two
black pieces.

